

Register your product and get support at

www.philips.com/dictation



VOICE TRACER

DVT1200

DVT2000

EN User manual

PHILIPS

Table of contents

1	Important safety information	5			
1.1	Safety instructions	5			
2	About this user manual	7			
2.2	Symbols used	7			
3	Digital Voice Tracer	8			
3.1	Product highlights	8			
3.2	What's in the box	9			
3.3	Product overviews	10			
3.3.1	Front and rear sides (DVT1200)	10			
3.3.2	Front and rear sides (DVT2000)	11			
3.3.3	Keys (DVT1200)	12			
3.3.4	Keys (DVT2000)	13			
3.4	Start-up screen	14			
3.4.1	Menu overview	15			
4	First steps	16			
4.1	Inserting the batteries	16			
4.2	Power on/off	17			
4.3	Initial installation process	17			
4.3.1	Language selection	17			
4.3.2	Set date & time	17			
4.4	Enabling/disabling the keypad lock	18			
4.5	Inserting a microSD card	18			
4.6	Accessories	19			
			4.6.1	How to connect headphones	19
			4.6.2	Connecting an external microphone	20
			4.7	Connecting to a computer	20
			4.7.1	Transferring files from or to the device	21
			4.7.2	Disconnecting from a computer	21
5	Record	22			
5.1	Creating a recording	22			
5.1.1	Recording using an external microphone	23			
5.2	Starting recording automatically	23			
5.2.1	Use Timer function	23			
5.2.2	Use voice activation	23			
6	Playback	24			
6.1	Selecting a recording	24			
6.2	Playback a recording or music file	24			
6.3	Adjusting playback speed	24			
6.4	Quick search	25			
6.5	Repeat a file / repeat a sequence	25			
6.6	Protecting a recording / lock file	26			
6.7	Unprotect / unlock file	26			
7	Delete	27			
7.1	Deleting recordings on the device	27			
7.2	Deleting all recordings in the folder	27			
8	Radio (DVT2000)	28			
8.1	Radio mode	28			
8.2	Saving a radio station pre-set	28			
8.2.1	Saving radio stations automatically	28			

8.2.2	Saving a radio station manually	28
8.2.3	Deleting a pre-set radio station	29
8.3	Recording from FM radio	29
<hr/>		
9	Settings	30
9.1	Recording settings	30
9.1.1	Set file location	30
9.1.2	Setting recording quality	30
9.1.3	Setting microphone sensitivity	31
9.1.4	Enabling/disabling noise reduction	32
9.1.5	Setting the timer	32
9.1.6	Enabling/disabling voice-activated recording	33
9.1.7	Setting auto divide	34
9.1.8	Enabling/disabling the record indicator	34
9.2	Display settings	35
9.2.1	Select language	35
9.2.2	Adjusting the display contrast	35
9.2.3	Enabling/disabling the background light	36
9.3	Device settings	36
9.3.1	Set date & time	36
9.3.2	AUTO-OFF	37
9.3.3	Enabling/disabling key and signal tones	38
<hr/>		
10	Service	39
10.1	Service functions	39
10.1.1	Display device information	39
10.1.2	Memory formatting	39
10.1.3	Device reset	40
10.2	Replacing batteries or rechargeable batteries	40
10.3	Updating the firmware	41
10.4	Troubleshooting	42

11	Appendix	43
11.1	Technical data	43

1 Important safety information

Do not make any adjustments and modifications that are not described in this manual. Follow all safety instructions to ensure proper operation of the device. The manufacturer assumes no liability for damages resulting from non-compliance with the safety instructions.

1.1 Safety instructions

- Protect the device from rain or water to prevent a short circuit.
- Do not expose the device to excessive heat caused by placing it on a heating device or in direct sunlight.
- Protect the cables from damage by being trapped, particularly at the plugs and where cables exit the housing.
- Back up your data and recordings. The manufacturer cannot be held responsible for any loss of data.
- Do not perform any maintenance operations that are not described in this user manual. Do not disassemble the device into its component parts to carry out repairs. The device may only be repaired in authorised service centres.

1.1.1 Batteries and rechargeable batteries

- Only use AAA batteries with the device.
 - Never try to recharge alkaline or non-rechargeable batteries.
 - Remove batteries or rechargeable batteries from the device if it will not be used for an extended period of time. The device can be damaged by leaking batteries or rechargeable batteries.
 - Do not remove batteries or rechargeable batteries from the device while it is recording. If you do this, data may be damaged or lost. Device malfunctions may also occur.
 - Batteries and rechargeable batteries contain substances that may pollute the environment. Used batteries and rechargeable batteries should be disposed of at an official collection point.
-

1.1.2 Memory cards

- The device supports microSD memory cards up to 32 GB in capacity (optimised for class 6 or higher).
- Make sure that the card has a sufficiently high data transfer rate. The manufacturer makes no guarantee for trouble free operation.
- Formatting a memory card erases all data on the card. The memory card must always be formatted in the device to ensure that the format is correct. Formatting the memory card using a computer can lead to eventual errors when reading or writing data.

1.1.3 Hearing protection

Observe the following guidelines when using headphones:

- Set the volume to a moderate level and do not use headphones to listen for excessively long periods of time.
- Be particularly careful to avoid adjusting the volume to a level that your hearing cannot deal with.
- Do not turn the volume up so high that you cannot hear what is going on around you.
- In potentially dangerous situations you must be very careful, or temporarily discontinue use.
- Do not use headphones while operating a motorised vehicle, cycling, or skateboarding, etc. You could be a hazard to yourself and other road users, and possibly be breaking the law.

1.1.4 Maximum sound power

- The manufacturer guarantees compliance with the maximum sound power of its audio players as determined by relevant regulatory bodies, but only with the original model of headphones supplied. If you need to replace these headphones, we recommend contacting your dealer to order the respective original Philips model.

1.1.5 Legal restrictions on recording

- The use of the device's recording function is subject to the legal restrictions that may apply in your country. You should also respect the privacy and personal rights of the third parties if you record talks or lectures.
- Please note that, in certain countries, you may be legally required to inform the person you are conversing with on the telephone that you are recording the conversation, or that the recording of telephone conversations is illegal. Please check if the use of such data is legal in your country prior to recording telephone calls.

2 About this user manual

You can find a quick overview of your device in the following pages. For detailed description, see the following chapters of this user manual. Read this user manual carefully.

2.1 Model-specific features and diagrams

This user manual describes a number of models of the device product range. Please note that some features are only available on certain models.

2.2 Symbols used



Tip

- This symbol identifies information that helps you to use your device more efficiently and simply.



Note

- This symbol indicates notices which you must observe when handling or operating the device.



Caution

- This symbol warns of damage to the device and possible data loss. Damage can be caused by improper handling.



Warning

- This symbol warns of danger to persons. Bodily injury or damage could be caused by improper handling.

3 Digital Voice Tracer

We are delighted that you have chosen a Philips device. Visit our website for comprehensive support such as user manuals, software downloads, warranty information and much more:

www.philips.com/dictation.

3.1 Product highlights


- Voice-activated recording mode without pressing buttons
- Slot for microSD card for extra memory
- Highlight important parts of your recording using index marks
- Noise reduction for clear recordings

3.2 What's in the box

- ① DVT1200: Device
- ② DVT2000: Device
- ③ Two AAA batteries
- ④ Quick-start guide
- ⑤ USB cable to connect to a computer
- ⑥ DVT2000: Stereo headphones

Note


- Please note that some individual components may not be included in delivery with your model. If any item is missing or damaged, please contact your distributor.

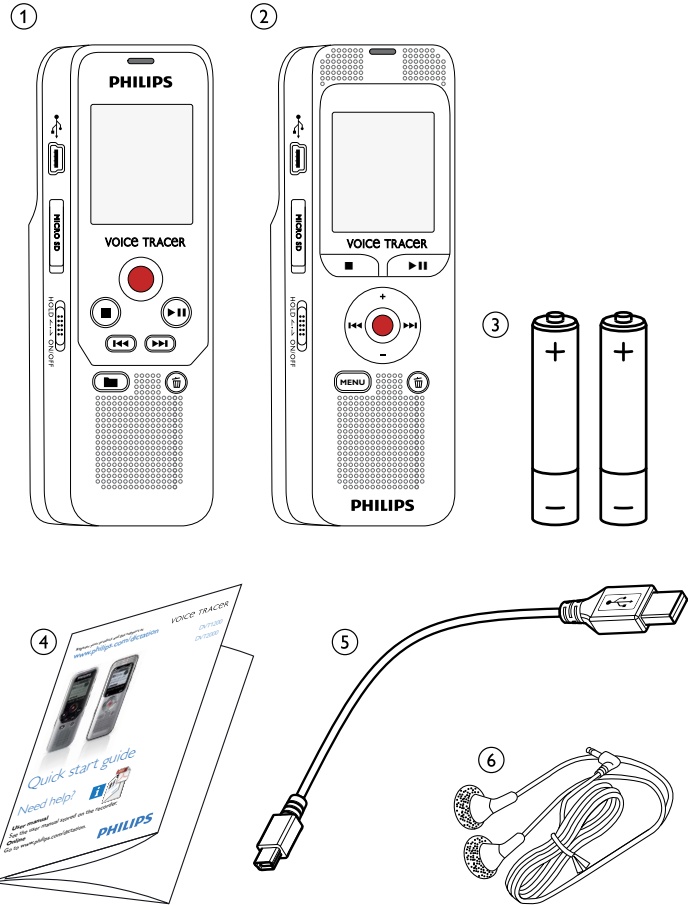

3.3 Product overviews


3.3.1 Front and rear sides (DVT1200)

- ① Power on/off key, keypad lock
- ② Slot for memory card (microSD card)
- ③ Micro USB port for computer connection
- ④ Status LED:
 - Red – device is recording
 - Green – device is playing back
 - Yellow – data is being transferred to/from the computer
- ⑤ Display
- ⑥ Operating panel with keys
- ⑦ Speaker
- ⑧ Noise reduction
- ⑨ Operating panel with keys
- ⑩ External microphone socket, (stereo jack, 3.5 mm)
- ⑪ Microphone
- ⑫ Headphone socket (stereo jack, 3.5 mm)
- ⑬ Battery compartment

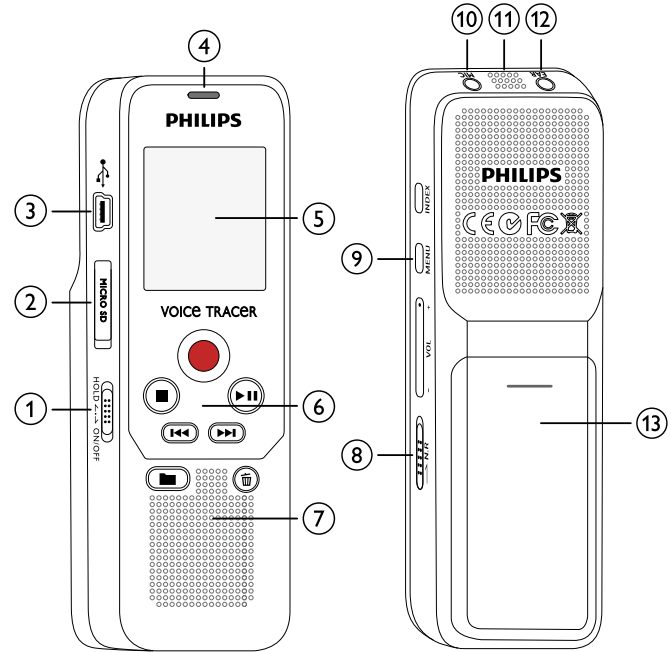


3.3.2 Front and rear sides (DVT2000)

- ① Power on/off key, keypad lock
- ② Slot for memory card (microSD card)
- ③ Micro USB port for computer connection
- ④ Microphone
- ⑤ Status LED:
 - Red – device is recording
 - Green – device is playing back
 - Yellow – data is being transferred to/from the computer
- ⑥ Display
- ⑦ Operating panel with keys
- ⑧ Speaker
- ⑨ Operating panel with keys
- ⑩ Noise reduction
- ⑪ External microphone socket, line-in socket (stereo jack, 3.5 mm)
- ⑫ Headphone socket (stereo jack, 3.5 mm)
- ⑬ Battery compartment

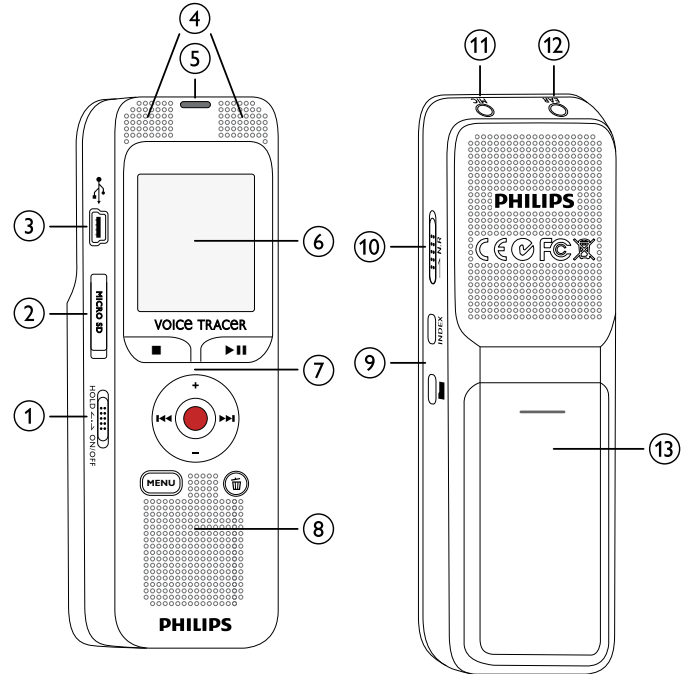


3.3.3 Keys (DVT1200)

- ① ■ Stop mode: Change folder
- ② ⏮ Short press: jump to the previous recording
Long press: fast seek rewind mode
Menu navigation: display previous menu tab
- ③ ■ Stop playback (stop key), close menu
- ④ ● Start recording (record key), confirm selection
- ⑤ ▶⏸ Play recording (playback key), Pause playback (pause key)
- ⑥ ▶▶ Short press: jump to the next recording
Long press: fast seek forward mode
Menu navigation: call next menu tab
- ⑦ 🗑 Delete recording (delete key)
- ⑧ Short press: set index mark, long press: display list of index registers (**INDEX** key)
- ⑨ Call up menu functions (**MENU** key)
- ⑩ + Increase volume, menu navigation: Select menu functions
- Volume down, menu navigation: Select menu functions
- ⑪ Switch on noise reduction (**N.R** key)

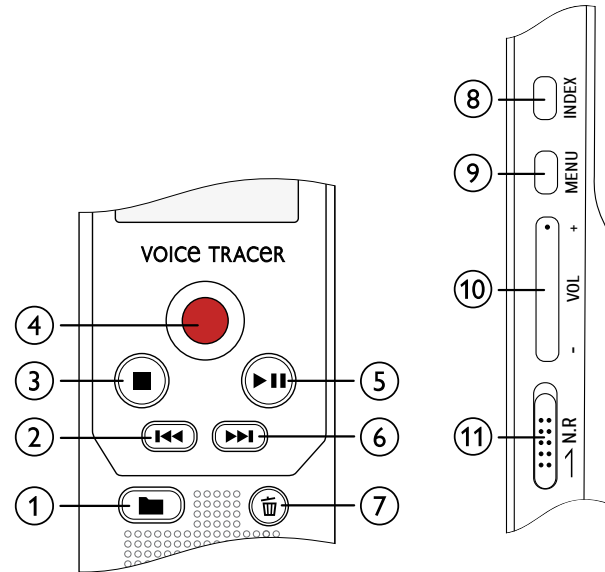

3.3.4 Keys (DVT2000)

- ① Call up menu functions (**MENU** key)
- ② + Increase volume, menu navigation: Select menu functions
 - ▶▶ Short press: jump to the next index mark
 - Menu navigation: display next menu tab
 - Long press: fast seek forward mode
- Volume down, menu navigation: Select menu functions
 - ◀◀ Short press: jump to the previous recording
 - Menu navigation: display previous menu tab
 - Long press: fast seek rewind mode
- ③ ■ Stop playback (stop key), close menu
- ④ ▶|| Play recording (playback key), Pause playback (pause key)
- ⑤ ● Start recording (record key), confirm selection
- ⑥ 🗑 Delete recording (delete key)
- ⑦ Switch on noise reduction (**N.R** key)
- ⑧ Short press: Set index mark, display list of index marks (**INDEX** key)
- ⑨ ■ Stop mode: Change folder

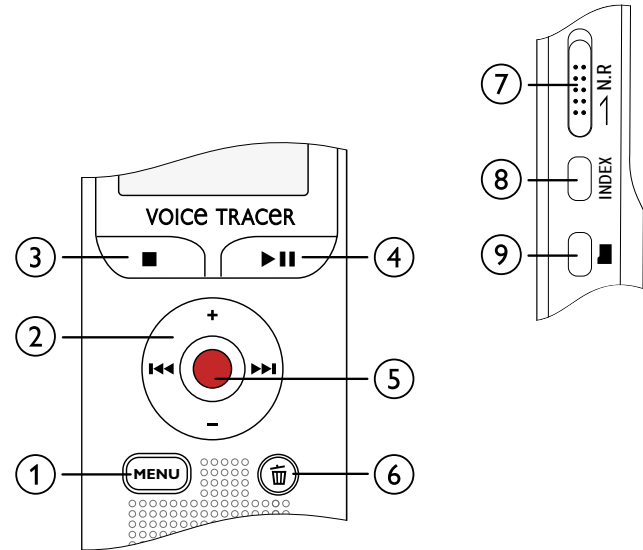


3.4 Start-up screen

- ① **HQ** Set recording quality: **LP** – LP, **SP** – SP, **HQ** – HQ, **PCM** – PCM
- ② **VA** – Voice activation switched on
- ③ **Microphone sensitivity**: **L** – low sensitivity (shorter distance), **H** – high sensitivity (longer distance), **LI** – Line-in source
- ④ Set repeat mode / continuous loop: **RF** – Repeat file playback, **RS** – Repeat selection/sequence, **RF** – Repeat folder playback, **RA** – Random repeat mode
- ⑤ **NR** – Noise reduction on
- ⑥ **Battery** charge level
- ⑦ **▶** – Playback, **⏸** – Pause, **■** – Stop, **●** – Record, **⏸** – Pause record
- ⑧ Position indicator of current playback/recording
- ⑨ Playback/recording time / Remaining recording time
- ⑩ File name of current playback/recording
- ⑪ **A** Selected folder, depending on the selected storage medium (**A** – internal memory, **●/■** – microSD card) / number of the current recording / total number of recordings in the folder



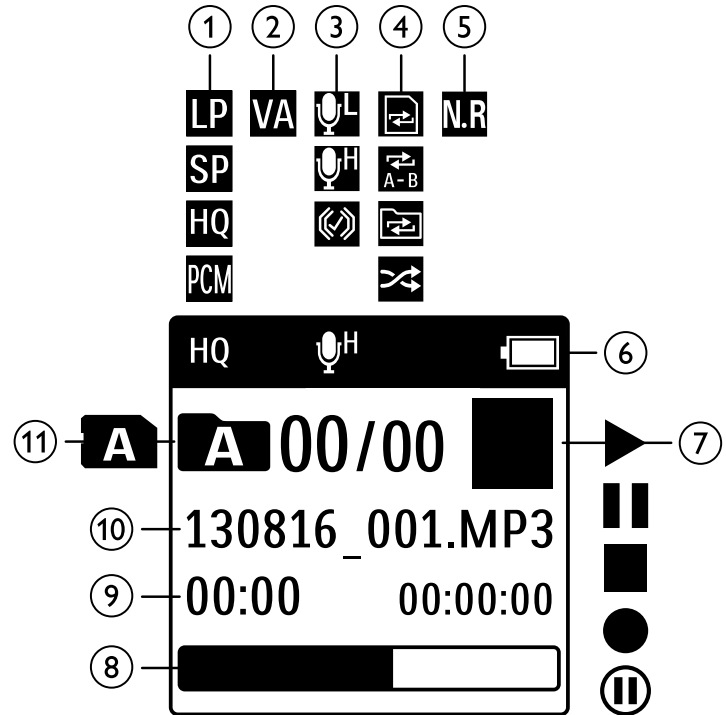


Note

- The position of the symbols may vary, depending on the model, the mode and the selected functions.



3.4.1 Menu overview

Note

- In stop mode (start-up screen), press **MENU**, to call the menu.
- Press **◀/▶** to select one of the following menus: , , ,  or .

File menu:

- [Repeat a file / repeat a sequence](#)
- [Protecting a recording / lock file](#)

Recording settings:

- [Setting microphone sensitivity](#)
- [Setting recording quality](#)
- [Setting the timer](#)
- [Enabling/disabling voice-activated recording](#)
- [Setting auto divide](#)

Display settings:






- [Select language](#)
- [Adjusting the display contrast](#)
- [Enabling/disabling the background light](#)

Device settings:

- [Set date & time](#)
- [AUTO-OFF](#)
- [Memory formatting](#)
- [Enabling/disabling the record indicator](#)
- [Enabling/disabling key and signal tones](#)
- [Set file location](#)
- [Display device information](#)
- [Device reset](#)

Radio settings: (DVT2000)

- [Radio mode](#)
- [Saving a radio station pre-set](#)

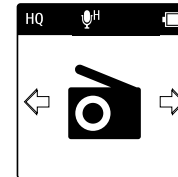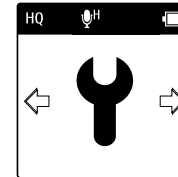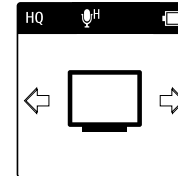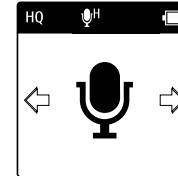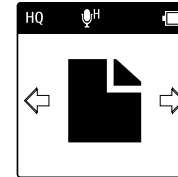

4 First steps

Use the installation guide on the following pages to start using your device quickly and easily.




Caution

- Follow the instructions on handling the device, especially the batteries and rechargeable batteries ([see also chapter 1.1.1 Batteries and rechargeable batteries, page 5](#)).


4.1 Inserting the batteries

Your device is supplied with two AAA batteries.


- 1 Slide the battery compartment cover downwards.

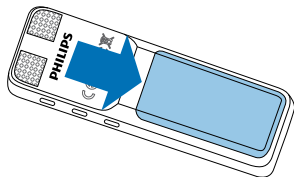


- 2 Fold the cover out.

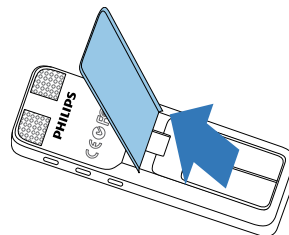

- 3 Insert the batteries or rechargeable batteries as shown into the device. Make sure the polarity is correct.

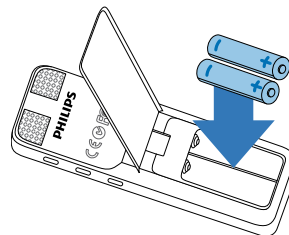


- 4 Fold the cover in. Push the cover up until it engages.

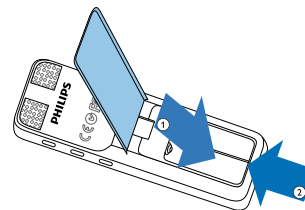

4.2 Power on/off

- 1 Slide the on/off switch on the side of the device downwards for approximately two seconds.
↳ The device turns on and the start-up screen is displayed.

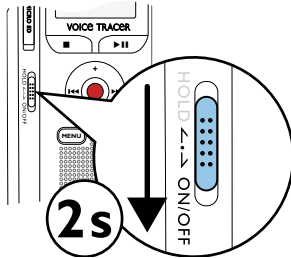

- 2 To power off, pull down the power switch on the side of the device again and hold for about two seconds.

4.3 Initial installation process

When using for the first time, you must set the display language as well as the date and time of the device.

4.3.1 Language selection

Follow the description in the chapter "Select language" ([see also chapter 9.2.1 Select language, page 35](#)).

Note

- Your language might not be available. Select an alternative one.

4.3.2 Set date & time

Follow the description in the chapter "Set date & time" ([see also chapter 9.3.1 Set date & time, page 36](#)).


Note

- The device switches itself off automatically if no key is pressed within a pre-set period of time ([see also chapter 9.3.2 AUTO-OFF, page 37](#)).

4.4 Enabling/disabling the keypad lock

The keypad lock deactivates all keys on the device. The timer function of the device continues to function.

- 1 Slide the HOLD switch up into the **HOLD** position to lock the keypad of the device.
↳ The display briefly shows 'On Hold' and turns off.

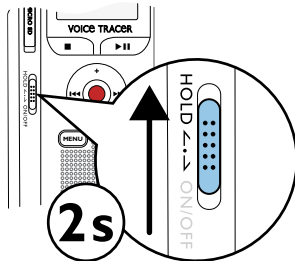

- 2 Slide the HOLD switch down to the Off position to disengage the keypad lock.


4.5 Inserting a microSD card



Caution

- Do not remove the memory card while recording is in progress. If you do this, data may be damaged or lost.

- 1 Flip the memory card slot cover to the side.
- 2 Insert the microSD card into the card slot with the contacts facing upwards.

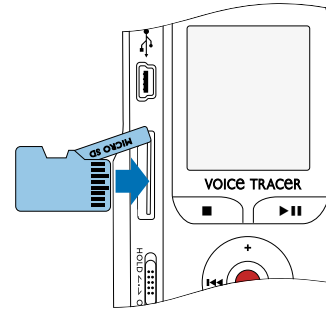

- 3 Insert the memory card until it snaps into place.
- 4 To remove the card press the memory card slightly until the snapping mechanism unlocks and the card is ejected.



Note

- To ensure that the device stores the recordings on the memory card, you must switch from the internal memory to microSD memory card ([see also chapter 9.1.1 Set file location, page 30](#)). The display shows a folder icon which indicates where the recordings are currently being stored: **A**, **B**, **C**, **D**, **F** – internal memory, **A**, **B**, **C**, **D**, **F** – memory card.

4.6 Accessories

Depending on the type of the device, the product package may include various accessories. Additional accessories may be obtained directly from your retailer.

4.6.1 How to connect headphones


Scope of delivery: DVT2000



Warning

- Set the volume to a moderate level and do not use headphones to listen for excessively long periods of time. Exposure to intense sound can cause hearing damage. Observe the Hearing safety instructions ([see also chapter 1.1.3 Hearing protection, page 6](#)).

- 1 Turn down the volume of the device before you plug in the headphones.
- 2 Insert the stereo jack into the headphone connection **EAR** on the top of the device.

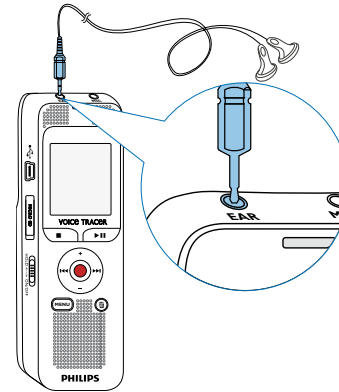

- 3 Turn up the volume until you reach a comfortable listening level. The speaker is switched off when headphones are connected.


4.6.2 Connecting an external microphone



Note

- If you connect an external microphone to the device, the recording source will switch automatically and the device microphone will turn off.

- 1 Stop the recording currently in progress.
- 2 Insert the jack into the microphone connection **MIC** on the top of the device.

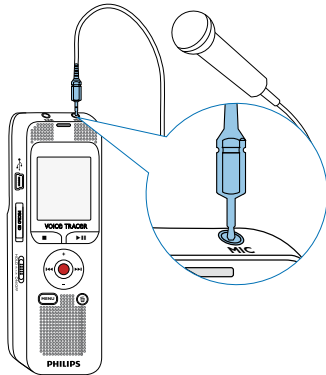


4.7 Connecting to a computer

You can select one of the following options once you have connected the device to a computer

- **A USB mass storage device:** You can use the File Explorer to access the device data without installing additional software. The device is automatically displayed as a mass storage device. It is a convenient way to store, back up and and move files. ([see also chapter 4.7.1 Transferring files from or to the device, page 21](#)).

- 1 Plug the USB connector into a USB port on your computer.
- 2 Insert the micro USB plug into the USB port on the side of the device.
↳ The device is displayed as a mass storage device in File Explorer.

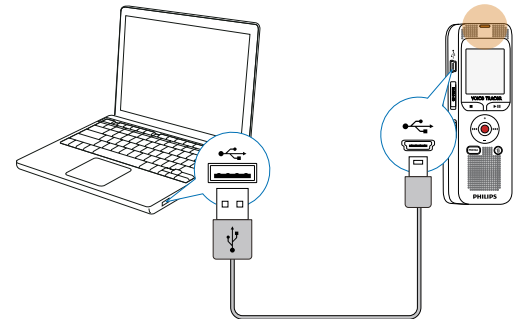



Caution

- Do not disconnect the device from the computer while files are transferred from or to the device (the status LED indicator flashes yellow when data is being transferred). This this may damage or corrupt the files.
- Do not format the drive of the device on a computer. If you want to delete all data, use the **Format memory** function ([see also chapter 10.1.2 Memory formatting, page 39](#)).



Caution

- Do not disconnect the device from the computer while files are transferred from or to the device (the status LED indicator flashes yellow when data is being transferred). This this may damage or corrupt the files.
- Do not format the drive of the device on a computer. If you want to delete all data, use the **Format memory** function ([see also chapter 10.1.2 Memory formatting, page 39](#)).

4.7.1 Transferring files from or to the device

You can use the File Explorer to access the device data without installing additional software. The device is automatically displayed as a mass storage device.

- 1 Connect the device to the computer as described.
- 2 Open File Explorer.
 - ↳ The device is automatically displayed, similarly to a USB memory stick or card, as a mass storage device. Use the **Voice** folder for recordings and the **Music** folder for music files (DVT2000).
- 3 Copy or move files to your computer or delete files to archive recordings and free up space on the device.



Note

DVT2000:

- The device supports music files in the formats WMA and MP3, which can be transferred from the computer to the **Music** folder of the device. The files are located in the **MP3/MP3** folder on the device.
- Files with copy protection (Digital Rights Management, DRM) are not supported.
- The device can store up to 99 music files.

4.7.2 Disconnecting from a computer

- 1 Select Eject USB in File Explorer.
- 2 Disconnect the USB cable from the computer.

5 Record

The device offers many features that you can use during recording or to improve the quality of a recording. Use the timer and the voice activation functions to start a recording automatically.

5.1 Creating a recording

Before starting a recording, set the required recording quality and microphone sensitivity.

When you record in environments with lots of noise in the background (e.g. while in a crowd or during a train or car journey), you can enable the noise reduction function to reduce the background noise ([see also chapter 9.1.4 Enabling/disabling noise reduction, page 32](#)).



Caution

- Do not remove batteries or rechargeable batteries from the device while it is recording. If you do this, data may be damaged or lost. Device malfunctions may also occur.

- 1 In stop mode (start-up screen), press **■** to select the desired folder for the recording.
↳ The following symbols will be displayed, depending on the selected location folder: **A**, **B**, **C**, **D**, **ℱ** – internal memory, **A**, **B**, **C**, **D**, **ℱ** – memory card.

- 2 Point the built-in microphone toward the sound source and press **●**.
↳ The record/play indicator lights red. The recording duration and the remaining recording time are displayed in the selected folder on the display.
- 3 Press **●** to pause recording.
↳ The record/play indicator will blink red.
- 4 Press the **●** key to resume recording.
- 5 Press the **■** key to stop recording.
↳ The device returns to stop mode.



Note

- **Start a new recording:** To stop the current recording and start a new one, press **▶▶**.
- To prevent files becoming too big during a long recording, for example a meeting lasting several hours, you can automatically split recordings ([see also chapter 9.1.7 Setting auto divide, page 34](#)).
- Each folder can store up to 99 files. The size of the memory depends on the location folder and the quality of a recording ([see also chapter 9.1.2 Setting recording quality, page 30](#)).
If the recording time or the number of files exceeds the available capacity, recording stops and a message is displayed. You can not make any more recordings. Delete the recordings which you no longer require, or connect the device to a computer and transfer the files to your computer.



Tip

- If you are to start a long recording session, replace or recharge the batteries before you begin.

5.1.1 Recording using an external microphone

If you connect an external microphone to the device, the recording source will switch automatically and the device's microphone will be turned off.

5.2 Starting recording automatically

You have two options to start automatic recording: Timer function and voice activation.





5.2.1 Use Timer function

You can use this function to start a recording at a specified date and time. The device can record from the device's microphone or an external microphone.

- 1 Customize the timer settings in the Settings menu and turn on the feature ([see also chapter 9.1.5 Setting the timer, page 32](#)).
 - ↳ The device will start recording at a specified time. The device can be switched off at this time or the keypad can be locked.





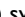

5.2.2 Use voice activation

When voice-activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the device will automatically pause recording after three seconds of silence, and resume only when you begin speaking again. Use the voice activation level to set the volume at which the device should begin recording.

- 1 Customize the voice-activated recording settings in the Settings menu and turn on the feature ([see also chapter 9.1.6 Enabling/disabling voice-activated recording, page 33](#)).
 - ↳ If this feature is on, the  symbol is displayed.
- 2 Press the  key.
 - ↳ The device switches to standby mode. The  symbol will be displayed. Recording will start when you begin speaking. When you stop speaking, the device will automatically pause recording after three seconds of silence.
- 3 Press the  key to stop recording.
 - ↳ The device returns to stop mode.


6 Playback

6.1 Selecting a recording





- 1 Press  to select the desired folder while the device is stopped.
↳ The following symbols will be displayed, depending on the selected location folder: **A**, **B**, **C**, **D**,  – internal memory, **A**, **B**, **C**, **D**,  – memory card. (**A**, **B**, **C** and **D** are recording folders, the  folder contains music files).
- 2 Press  while the device is stopped.
↳ The position indicator jumps to the start of the next file.
- 3 Press  while the device is stopped.
↳ The position indicator jumps to the start of the preceding recording.

Note

DVT2000:

- The device supports music files in the formats WMA and MP3, which can be transferred from the computer to the **Music** folder of the device. The files are located in the  folder on the device.
- Files with copy protection (Digital Rights Management, DRM) are not supported.
- The device can store up to 99 music files.

6.2 Playback a recording or music file


- 1 Select the required file as described.
- 2 Press  to playback the selected file.
↳ The record/play indicator will light green. The total playback time of the current file will be shown on the display.
- 3 Press the **+/-** buttons to adjust the volume.
- 4 Press the  key to pause playback.
↳ The playback will stop and the green LED will start blinking.
- 5 Press  to continue playback from the previous position.
- 6 Press the  key to stop playback.



Tip

- DVT2000: You can call up the playback mode settings during music playback.

6.3 Adjusting playback speed

- 1 During playback press **MENU**.
- 2 Press **+/-** to set the desired playback speed.
- 3 Press the record key, , to confirm.

6.4 Quick search

You can scan backward or forward in the current file at a fast speed. This allows to find a specific part of the recording.

- 1 During playback press and hold one of the two navigation keys **⏮** or **⏭**.
↳ The selected recording is searched for at high speed in either forward or rewind mode.
- 2 Release the key
↳ to resume playback at the selected speed from the current position.

6.5 Repeat a file / repeat a sequence

You can automatically repeat playback of a certain file, folder or sequence (=loop).

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **⏮/⏭** to select the file menu **📁**.
- 3 Press the record key, **●**, to confirm.
- 4 Press **+/-** to select the Repeat function.
- 5 Press the record key, **●**, to confirm.

- 6 Press **+/-** to repeat a certain recording/file or a folder automatically.
↳ The symbol of the selected repeat mode is displayed on the display:
 - 📁** – repeat a file
 - 📁** – repeat all files in a folder
 - 📁** – repeat a selection/sequence
 - ① Press **⏮**, to specify the sequence start point.
 - ② Press **⏭**, to specify the sequence end point.
 - 🎲** – Random playback
- 7 Press the record key, **●**, to confirm.
↳ Playback of the recording or folder starts.




Tip


- During playback, press **📁**, to call the function repeat selection/sequence directly. Press **⏮**, to specify the sequence start point. Press **⏭**, to specify the sequence end point.
- Press **🎲**, to end repeating of the sequence.

6.6 Protecting a recording / lock file

You can protect recordings against unintentional deletion.

- 1 Select the required file as described.
- 2 Press **MENU**.
- 3 Press **◀◀/▶▶** to select the file menu .
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select the **Lock file** function.
- 6 Press the record key, **●**, to confirm.
- 7 Use **+/- Lock** to select.
- 8 Press the record key, **●**, to confirm.

6.7 Unprotect / unlock file

- 1 Select the required file as described.
- 2 Press **MENU**.
- 3 Press **◀◀/▶▶** to select the file menu .
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select the **Lock file** function.
- 6 Press the record key, **●**, to confirm.
- 7 Use **+/- Unlock** to select.
- 8 Press the record key, **●**, to confirm.

7 Delete

You can delete an individual recording on the device or all the recordings in the folder






7.1 Deleting recordings on the device


You can delete individual recordings from the device. Connect the device to a computer if you want to delete multiple files.



Caution





- Only delete the recordings that you no longer need. Keep in mind that deleted recordings can not be recovered.

- 1 In stop mode (start-up screen) select the folder in which you wish to delete a recording by pressing .
- 2 Press   to select the recording that you wish to delete.
- 3 Press the delete key .
- 4 Press +/- Delete to select.
- 5 Press the record key, , to confirm.
- 6 Use +/- OK to select.

- 7 Press  to confirm the deletion.
↳ The recording is deleted. Sequential file numbers are reassigned automatically.
-

7.2 Deleting all recordings in the folder

You can delete all recordings in the selected folder. Connect the device to a computer if you want to rename an entire folder.

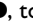- 1 In stop mode (start screen), select the folder in which you wish to delete all recordings by pressing .
- 2 Press the delete key .
- 3 Press +/- Delete all to select.
- 4 Press the record key, , to confirm.
- 5 Use +/- OK to select.
- 6 Press  to confirm the deletion.
↳ All recordings in the folder are deleted. The numbering of the recordings is renewed.


8 Radio (DVT2000)



Note

- The headphones are the device's antenna. Radio reception is only possible if headphones are connected to the device.

8.1 Radio mode

- 1 Connect the headphones to the device. ([see also chapter 4.6.1 How to connect headphones, page 19](#)).
- 2 In stop mode (start-up screen), press **MENU**.
- 3 Press **◀◀/▶▶** to select the radio menu .
- 4 Press the record key, **●**, to confirm.
- 5 Press **◀◀/▶▶** to select the required frequency. Alternatively: Press and hold **◀◀/▶▶** to start seeking for the next radio station.
- 6 Press the **+/-** buttons to adjust the volume.
- 7 Press **MENU** to switch off the radio.

8.2 Saving a radio station pre-set

The radio can store up to 40 radio stations in pre-sets.

8.2.1 Saving radio stations automatically

- 1 In radio mode, press the record key **●**.
- 2 Press **+/-** to select the Auto search function.
- 3 Press the record key, **●**, to confirm.
↳ The device automatically seeks and stores the radio frequencies in the pre-sets. The device can store up to 40 radio stations.

8.2.2 Saving a radio station manually

- 1 In radio mode, press **◀◀/▶▶** to select the required frequency. Alternatively: Press and hold **◀◀/▶▶** to start seeking for the next radio station.
- 2 Press the **●** key.
- 3 Press **+/-** to select the Save channel function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select a station pre-set.
- 6 Press the **●** key to save the selected radio station in the pre-sets.

8.2.3 Deleting a pre-set radio station

- 1 Press **◀◀/▶▶** to select the radio station that you wish to delete.
- 2 Press the **●** key.
- 3 Press **+/-** to select **Delete** or **Delete all**.
- 4 Press **●** to confirm the deletion.

8.3 Recording from FM radio

You can record FM radio.

- 1 Start the radio as described, and select the radio station you want to record.
- 2 Press the **●** key.
- 3 Press **+/- FM RECORD** to select.
↳ The record/play indicator lights red.
- 4 Press **●** to pause recording.
- 5 Press the **■** key to stop recording.

9 Settings

Press and hold the **MENU** key for at least two seconds while the device is stopped (start-up screen) to enter the Settings menu.



Note

- Press the **■** key at the end of an operation to return to the stop mode. Press the **■** key during the operation to cancel the operation without saving and return to the stop mode.

9.1 Recording settings

9.1.1 Set file location

The display shows a folder icon which indicates where the recordings are currently being stored: **A**, **B**, **C**, **D**, **Ⓜ** – internal memory, **A**, **B**, **C**, **D**, **Ⓜ** – memory card.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **⏪/⏩** to select the device settings menu **Ⓜ**.
- 3 Press **+/-** to select the **Memory select** function.
- 4 Press the record key, **●**, to confirm.

- 5 Press **+/-** to select if you want to save the files in the internal memory or on the microSD card.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.







Tip


- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.1.2 Setting recording quality

Use the recording quality settings to set the file format and the quality of the recording as the data rate (bit rate). The higher the recording quality the bigger the file and the less recordings you can create.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **⏪/⏩** key to select the record settings menu **Ⓜ**.
- 3 Press **+/-** to select the **Quality settings** function.
- 4 Press the record key, **●**, to confirm.


- 5 Press **+/-** to select the required recording quality.
- ↳ The selected quality setting icon will be displayed.
-  **PCM** – maximum quality, uncompressed,
format: WAV, 1,536 kbit/s (DVT2000)
 -  **HQ** – high quality, format: WAV, 384 kbit/s (DVT1200)
Format: MP3, 192 kbit/s (DVT2000)
 -  **SP** – above-average recording time,
Format: WAV, 128 kbit/s (DVT1200)
Format: MP3, 64 kbit/s (DVT2000)
 -  **LP** – maximum recording time,
Format: WAV, 64/32 kbit/s (DVT1200)
Format: MP3, 8 kbit/s (DVT2000)

6 Press the record key, , to confirm.

7 Press the  key to exit the menu.








Tip

- Press the  key to cancel the operation without saving and return to the stop mode.


9.1.3 Setting microphone sensitivity

You can customize the microphone settings to suit the recording conditions. Adjust the recording sensitivity to avoid recording background noises and to adapt to the recording environment.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the  key to select the record settings menu .
- 3 Press **+/-** to select the **Mic sensitivity** function.
- 4 Press the record key, , to confirm.
- 5 Press **+/-** to select the required recording quality.
↳ The selected microphone/recording sensitivity icon will be displayed.
High – high sensitivity, source far away
LOW – low sensitivity, source very near
- 6 Press the record key, , to confirm.
- 7 Press the  key to exit the menu.




Tip

- Press the  key to cancel the operation without saving and return to the stop mode.

9.1.4 Enabling/disabling noise reduction

When you record in environments with lots of background (e.g. while in a crowd or during a train or car journey), you can enable the noise reduction function to reduce the background noise .

- 1 In stop mode, drag the switch on the side of the device upwards into the position **N.R.**

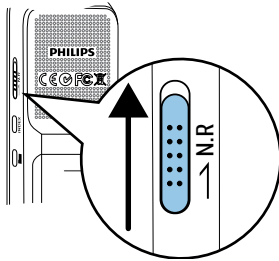

- 2 Press the record key ● to start recording.
↳ If this feature is on, the **NR** symbol is displayed.

Note

- Noise reduction is only possible with PCM recording quality **PCM**. If you switch on noise reduction, the device automatically switches to PCM recording quality **PCM**.

9.1.5 Setting the timer

You can use this function to start a recording at a specified date and time. The device can record from the device's microphone or an external microphone.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **◀▶** key to select the record settings menu **📁**.
- 3 Press **+/-** to select the Timer function.
- 4 Press the record key, ●, to confirm.
- 5 Press **+/-** to select the **Set the begin** function to set the alarm.
- 6 Press the record key, ●, to confirm.
- 7 Press **+/-** to select the **Set date** function.
- 8 Press the record key, ●, to confirm.
- 9 Set the date as described in ([see also chapter 9.3.1 Set date & time, page 36](#)).
- 10 Press the record key, ●, to confirm.
- 11 Press **+/-** to select the **Set time** function.
- 12 Press the record key, ●, to confirm.

13 Set the time as described in [\(see also chapter 9.3.1 Set date & time, page 36\)](#).

14 Press the record key, ●, to confirm.

15 Press the stop key ■.

16 Press +/- to select the **Duration** function to set the recording duration.

17 Press the record key, ●, to confirm.

18 Press +/- to set the required recording duration. Press **no limit** for unlimited recording.

19 Press the record key, ●, to confirm.

20 Press +/- to select the **Record source** function to set the sound source.

21 Press the record key, ●, to confirm.

22 Press +/- to select if the device should record from an internal microphone or an external source.

23 Press the record key, ●, to confirm.

24 Press the stop key ■.

↳ The device will start recording at a specified time.



Tip

- Press the ■ key to cancel the operation without saving and return to the stop mode.

9.1.6 Enabling/disabling voice-activated recording

If voice-activated recording is enabled, recording session will start when you begin speaking. When you stop speaking, the device will automatically pause recording after three seconds of silence, and resume only when you begin speaking again.

Use the voice activation level to set the volume at which the device should begin recording.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the ◀▶ key to select the record settings menu 📁.
- 3 Press +/- to select the **Voice Activation** function.
- 4 Press the record key, ●, to confirm.
- 5 Press +/- to select the **On** function.
- 6 Press the record key, ●, to confirm.
↳ If this feature is on, the VA symbol is displayed.
- 7 Press +/- to select the **Off** function to turn off voice-activated recording.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.1.7 Setting auto divide

You can automatically divide large recordings, such as a multi-hour meeting recording. Once the set time has been reached, the device stops the current recording and automatically starts a new one.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **◀◀/▶▶** key to select the record settings menu **Ⓜ**.
- 3 Press **+/-** to select the **Auto divide** function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select if you want to record to a new file every 30 or 60 minutes, or turn off this feature.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.1.8 Enabling/disabling the record indicator

This function allows you to switch off the status LED.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **◀◀/▶▶** to select the device settings menu **Ⓜ**.
- 3 Press **+/-** to select the **Record lamp** function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to enable/disable the LED indicator.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.


9.2 Display settings

9.2.1 Select language



Note

- Your language might not be available. Select an alternative one.


- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **◀◀/▶▶** key to select the display settings menu .
- 3 Press **+/-** to select the **Language** function.
- 4 Press the record key, **●**, to confirm.
- 5 Use the **+/-** keys to select the display language you want.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.2.2 Adjusting the display contrast


- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **◀◀/▶▶** key to select the display settings menu .
- 3 Press **+/-** to select the **Contrast** function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **◀◀/▶▶** to select the required display contrast.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.2.3 Enabling/disabling the background light

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press the **◀◀/▶▶** key to select the display settings menu .
- 3 Press **+/-** to select the Backlit function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select from the following settings: 8s, 20s, 0n.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.




Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

9.3 Device settings

9.3.1 Set date & time

The date and time entered are saved with each recording as the recording time.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **◀◀/▶▶** to select the device settings menu .
- 3 Press **+/-** to select the Date/time function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select the Set time format function.
- 6 Press the record key, **●**, to confirm.
- 7 Press **+/-** to switch between the 12/24-hour system.
- 8 Press the record key, **●**, to confirm.
- 9 Press **+/-** to select the Set date function.
- 10 Press **+/-** to set the year.
- 11 Press **▶▶**.
- 12 Press **+/-** to set the month.

13 Press ►►.

14 Press +/- to set the day.

15 Press the record key, ●, to confirm.

16 Press +/- to select the Set time function.

17 Press the record key, ●, to confirm.

18 Press +/- to set the hours.

19 Press ►►.

20 Press +/- to set the minutes.

21 Press the record key, ●, to confirm.

22 Press the ■ key to exit the menu.




Tip

- Press the ■ key to cancel the operation without saving and return to the stop mode.

9.3.2 AUTO-OFF

The device switches off automatically if no key is pressed within a pre-set period of time. This saves power.

1 In stop mode (start-up screen), press **MENU**.

2 Press ◀◀/▶▶ to select the device settings menu .

3 Press +/- to select the Auto off function.

4 Press the record key, ●, to confirm.

5 Press +/- to specify whether the device should turn off automatically after 5, 15, 30 or 60 minutes' inactivity.

6 Press the record key, ●, to confirm.

7 Press the ■ key to exit the menu.



Tip

- Press the ■ key to cancel the operation without saving and return to the stop mode.

9.3.3 Enabling/disabling key and signal tones

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **◀◀/▶▶** to select the device settings menu **Ⓕ**.
- 3 Press **+/-** to select the Device sounds function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to enable/disable the key and signal tones.
- 6 Press the record key, **●**, to confirm.
- 7 Press the **■** key to exit the menu.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

10 Service

Do not perform any maintenance operations that are not described in this user manual. Do not disassemble the device into its component parts to carry out repairs. The device may only be repaired in authorised service centres.

10.1 Service functions

10.1.1 Display device information

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **◀◀/▶▶** to select the device settings menu **⚙**.
- 3 Press **+/-** to select the Information function.
- 4 Press the record key, **●**, to confirm.
- 5 Press **+/-** to select the desired information.
 - ↳ The display shows general device-related data: Recording time in the selected memory, remaining recording time in the selected memory, firmware version of the device.
- 7 Press the stop key **■** to return to the stop mode.

10.1.2 Memory formatting



Caution

- Formatting the memory deletes all recordings and files saved on the device.

You can use this feature to delete all data and format the selected memory.

- 1 Select the memory that you want to format (internal memory or microSD card memory) ([see also chapter 9.1.1 Set file location, page 30](#)).
- 2 In stop mode (start-up screen), press **MENU**.
- 3 Press **◀◀/▶▶** to select the device settings menu **⚙**.
- 4 Press **+/-** to select the Format memory function.
- 5 Press the record key, **●**, to confirm.
- 6 Press **+/-** to select the memory to be formatted.
- 7 Press the record key, **●**, to confirm.
- 8 Use **+/-** OK to select.
- 9 Press the record key, **●**, to confirm.



Tip

- Press the **■** key to cancel the operation without saving and return to the stop mode.

10.1.3 Device reset

This function is used to return all settings to the factory defaults. Recordings and files are not deleted.

- 1 In stop mode (start-up screen), press **MENU**.
- 2 Press **◀◀/▶▶** to select the device settings menu **⚙**.
- 3 Press **+/-** to select the **Reset default** function.
- 4 Press the record key, **●**, to confirm.
- 5 Use **+/-** OK to select.
- 6 Press the record key, **●**, to confirm.
↳ All device settings will be reset to the factory defaults. You must reset the display language, date and time ([see also chapter 4.3 Initial installation process, page 17](#)).

10.2 Replacing batteries or rechargeable batteries



Caution

- Do not remove batteries or rechargeable batteries from the device while it is recording. If you do this, data may be damaged or lost. Device malfunctions may also occur.

When the batteries are nearly empty, the battery indicator blinks; you should replace them.

Proceed as described in [4.1 Inserting the batteries](#).



Note

- If it takes longer than 2 minutes to replace the batteries, you may have to reset the time.
- Never try to recharge alkaline or non-rechargeable batteries.
- Batteries and rechargeable batteries contain substances that may pollute the environment. Used batteries and rechargeable batteries should be disposed of at an official collection point.

10.3 Updating the firmware

Your device is controlled by an internal program called firmware. As a part of ongoing product maintenance, the firmware is upgraded and errors are corrected.

It is possible that a newer version (an "update") of the firmware has been released since you purchased the device. In this case you can easily update your device to the latest version.

You can find more information under www.philips.com/dictation.

10.4 Troubleshooting

Problem	Possible cause/solution
The device does not turn on	<ul style="list-style-type: none"> The batteries or rechargeable batteries are not inserted correctly. <ul style="list-style-type: none"> ↳ Check to ensure that the batteries or rechargeable batteries are correctly inserted. Make sure the polarity is correct. Batteries are empty. <ul style="list-style-type: none"> ↳ Replace or recharge the batteries.
The device does not playback recordings	<ul style="list-style-type: none"> The keypad lock may be enabled. <ul style="list-style-type: none"> ↳ Slide the HOLD switch to the "Off" position. No recordings are saved in the device.
The device does not respond.	Remove the batteries/rechargeable batteries and insert them again.
microSD card can not be selected as a recording location	<ul style="list-style-type: none"> There is no memory card in the device. <ul style="list-style-type: none"> ↳ Insert a memory card into the device. Memory card is not formatted (file system FAT32). <ul style="list-style-type: none"> ↳ Format the memory card in the device.

Problem	Possible cause/solution
I cannot hear anything from the speaker.	<ul style="list-style-type: none"> A headset is connected to the device. The volume is at the lowest setting.
The recording session does not start	<ul style="list-style-type: none"> Pre-recording or voice-activated recording mode may be enabled. The keypad lock may be enabled. <ul style="list-style-type: none"> ↳ Slide the HOLD switch to the "Off" position. The maximum number of recordings may have been reached or the available space for recording is full. <ul style="list-style-type: none"> ↳ Delete some recordings or move them to an external device. ↳ Select another location folder.
I cannot hear anything from the headphones.	<ul style="list-style-type: none"> The headphones are incorrectly connected. <ul style="list-style-type: none"> ↳ Check the headphone connection. The volume is at the lowest setting.
External microphone records mono sound only	Switch external sound source to stereo microphone.

11 Appendix

The information in this user manual has been produced to the best of our knowledge. It (particularly the technical data) may be modified or updated at any time without prior notice.

11.1 Technical data

Technical data	
Dimensions	DVT1200: 40 × 112 × 19 mm DVT2000: 40 × 118 × 20 mm
Weight	DVT1200: 60 g (incl. batteries/rechargeable batteries) DVT2000: 55 g (incl. batteries/rechargeable batteries)
Batteries	2 × AAA alkaline batteries
USB connection	High-speed 2.0, Micro-USB
USB input	USB 5 V/DC ⏻, 500 mA

Technical data	
Microphone connection	Stereo jack, 3.5 mm
Headset connection	Stereo jack, 3.5 mm
Display	23 × 23 mm Resolution: 112 × 112 pixels
Internal memory	NAND-Flash, 4 GB
Memory card	microSD card up to 32 GB SDHC optimised for class 6 or higher
Recording format DVT1200	HQ – WAV, 384 kbit/s SP – WAV, 128 kbit/s LP – WAV, 64/32 kbit/s
Recording format DVT2000	PCM – WAV, 1,536 kbits/s HQ – MP3, 192 kbits/s SP – MP3, 64 kbits/s LP – MP3, 8 kbits/s
Music playback (DVT2000)	MP3, WMA Bit rate: 8 – 320 kbps no DRM
Speaker	Frequency range: 750 – 18,000 Hz Output: 110 mW

Technical data

Recording time	HQ – 23 h
Internal storage	SP – 68 h
DVT1200	LP – 290 h

Recording time	PCM – 5 h
Internal storage	HQ – 45 h
DVT2000	SP – 136 h
	SLP – 1082 h

Battery life	Recording in LP mode (built-in memory /
DVT1200	microSD memory card)
	35 h/14 h (alkaline batteries)

Battery life	Recording in LP mode (built-in memory /
DVT2000	microSD memory card)
	40 h/18 h (alkaline batteries)

Sampling rate	HQ – 24 kHz
DVT1200	SP – 8 kHz
	LP – 8 kHz

Sampling rate	PCM – 48 kHz
DVT2000	HQ – 32 kHz
	SP – 16 kHz
	LP – 8 kHz

Technical data

Radio (DVT2000)	FM stereo
	Frequency range: 87.5 – 108 MHz
	Memory capacity: 20 radio stations

System requirements	Operating system: Windows 8, 7, Vista, XP (32-bit, SP2), MacOS X 10.8, Linux
---------------------	---

Temperature	5 °C – 45 °C / 41 °F – 113 °F
-------------	-------------------------------

Humidity	10% – 90%
----------	-----------



The conformity with the relevant EU directives is confirmed by the CE mark.

Declaration of Conformity

Speech Processing Solutions GmbH hereby declares that the devices DVT1200, DVT2000 fully comply with the basic requirements and other relevant provisions of Directives 2006/95/EC, 2004/108/EC and 2009/125/EC.

A complete Declaration of Conformity for this product is available at www.philips.com/dictation.

This product was manufactured using high-quality materials and components which may be recycled and reused. Adhere to the applicable statutory provisions, and only dispose of these products at official collection points. The proper disposal of the device helps avoid potential adverse impacts on environment and health.



Packaging: Please observe the recycling and packaging provisions applicable in your country.

Batteries: Used batteries should be disposed of at an official collection point.



Product: The crossed dustbin symbol on your product indicates that special waste regulations shall apply to the electrical and electronic equipment contained therein.

In keeping with the provisions of the EU Directive relating to the disposal of waste electrical and electronic equipment and the protection of the environment and the health, old devices which are no longer required, may be disposed of as follows:

- Your dealer will take care of the old equipment when you buy a new device from him.
- Used devices should be disposed of at an official collection point.

Neither Speech Processing Solutions GmbH nor its affiliates shall be liable to the purchaser of this product or third parties with respect to claims for damages, losses, costs or expenses incurred by purchaser or third parties as a result of an accident, misuse or abuse of this product or unauthorized modifications, repair, modification of the product or failure to meet the operating and maintenance instructions provided by Philips.

This User Manual is a document with no contractual nature.

We accept no liability for changes, mistakes or printing errors.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips Electronics NV and are used by Speech Processing Solutions under license from Koninklijke Philips Electronics NV.

Trademarks are the property of their respective owners.

