



2W06243

# HARD WATER DISHWASHER DETERGENT

Cutlery • Crockery • Stainless Steel • Utensils

## USES

A powerful detergent for machine dishwashing that removes stubborn soiling with ease.

*Hard Water Dishwasher Detergent* is a high quality, sophisticated product which ensures consistently excellent results in both soft and hard water areas. An anti-corrosive agent has been added to the formula to protect the dishwashing machine.

Ideal for washing cutlery, crockery, stainless steel and utensils. Suitable for all dish washing machines in food and catering establishments. Can be used as an effective detergent for tray washing machines.


## DIRECTIONS

Put dosing tube into the container of *Hard Water Dishwasher Detergent*, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense *Hard Water Dishwasher Detergent* into the machine. To remove stubborn tannin, tea or coffee stains, soak crockery in a solution of 1 part *Hard Water Dishwasher Detergent* to 100 parts water for between 2 and 5 minutes, depending upon the degree of soiling.

N.B. DO NOT use on aluminium, zinc, magnesium and their alloys.



## AREAS OF USE

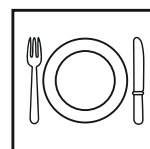

Plates/Utensils

## DILUTIONS

HARD WATER DISHWASHER DETERGENT : WATER	
Machine washing 2-8ml per litre	Tannin stain removal 1:100



K House, Sheffield Business Park, Europa Link,  
Sheffield, S9 1XU T: 0844 980 8000, www.zworksupplies.co.uk

