

instruction manual



operation


Connect the power cord to a 230V outlet. With this setting the shredder is automatically started by inserting paper into the shred opening. When the paper has passed through, the shredder will stop.

Clearing a jam This machine with auto reverse function, it will auto reverse to release the jammed paper while jamming. If the jam cannot be cleared, press the REVERSE button, and remove the excess paper from the feed opening. If the jam cannot be cleared following the procedure, unplug the unit and carefully remove the jammed paper manually.

Overheating If your shredder overheats, the unit will automatically shut off and all functions will cease in order to protect the motor. Turn off and unplug the shredder from the outlet. Allow enough time for the motor to cool down. The shredder will not resume normal function until the temperature of the motor cools down to a safe temperature. Once cool, plug the shredder back into the outlet, turn the unit back on and resume normal operation. Make sure to empty wastebasket to avoid overloading the basket and damaging the cutting mechanism.

Bin Full Function Some shredders are equipped with a mechanical or optical Bin Full sensor. When the basket becomes full, the shredder will cease operation. Empty the basket, then resume operation.

Emptying Basket Always turn the shredder off and unplug the power cord from the AC outlet before cleaning it, moving it, or emptying the wastebasket. Always keep wastebasket emptied so that the shredder's output is not impeded. Never let the wastebasket get full. This will lead to shredded material being pulled back up into the shredder and cause jams.

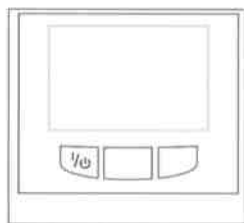

ON/OFF Reverse Maintain

warning



Place the device near to an easily accessible electric socket. Always switch-off the device before removing it from the waste basket. Always disconnect the plug before opening the case. Always turn the shredder off and unplug the power cable before cleaning it, moving it, or emptying the wastebasket.

DO NOT PLACE FINGERS OR CLOTH TOO CLOSE TO THE FEED SLOT AS SERIOUS INJURY MAY OCCUR.

Keep wastebasket emptied so that the shredder output is not impeded. The unit should only be fed with paper. Shredding other types of materials like envelopes, labels or anything with glue or any sticky substance can cause injuries or may damage the shredder.

caution

Do not attempt to open this unit. There is a risk of electrical shock which could cause serious injury or even death due the hazardous voltage.

- Do not alter the unit or power cord in any way
- Do not operate the unit if it or the power cord appears damaged in any way.
- Never overload electrical outlets beyond their capacity. This could result in an electrical fire.
- Always unplug the unit when moving it or not using it for a period of time.
- Keep children away from the machine.
- Keep all loose articles of clothing, ties, jewellery, long hair or other loose objects away from opening, injury may result.
- Never insert fingers into opening. Serious injury may result.
- Ensure that the sheet capacity of 12 sheets is not exceeded.
- Do not shred any wet paper, carbon paper or vinyl bags.

The shred will stick in the cutter and may shorten shredding performance.

product specification

Throat width: 245 mm Shred Width: 3X9mm Sheet Capacity: 12 sheets (A4 paper) Voltage: 230V
Compliant with EU directive 2006/95/EC LVD (Low Voltage directive), Operating Limits 230V -10% +6% (i.e. 207.0 V-243.8V)

code: **928867**

www.5staroffice.com
company no. 425809